

Quick Start Guide




Step A **Connect**

Step B **Setup**

Step C **Enjoy**

What's in the Box?

You should find these items upon opening the box.

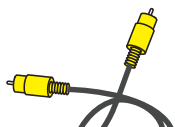

Composite Video Cable




Quick Start Guide




Remote control with battery

Remove the plastic protective sheet

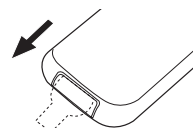

FM antenna

 

User Manual

PHILIPS

Step A *Connect*

Tip

See the User Manual for other TV connection options.

1

Connect the speaker cables.

2



Connect the FM antennas.

3


Connect the composite video cable to a TV.

4

Connect the power cords of the system and TV.

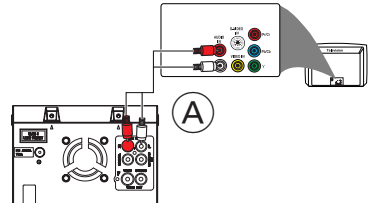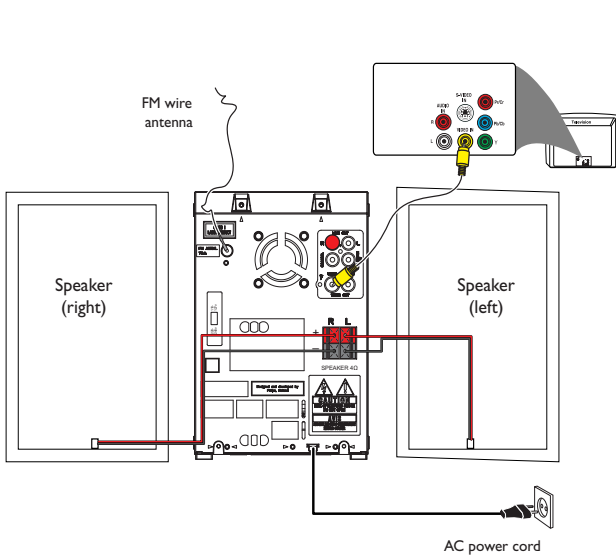

(A) To listen to the sound of this DVD Player through your TV, use the audio cables (white/red-not supplied) to connect **LINE OUT (L/R)** jacks of the DVD Player to the corresponding **AUDIO IN** jacks on the TV.

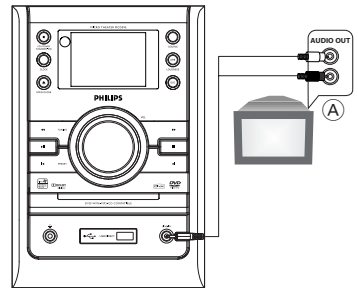

(B) To listen to the sound of your TV through this DVD player, use a cinch cable (not supplied) to connect **LINE-IN** on the front panel of the DVD player to the corresponding **AUDIO OUT** jacks on the TV.

Step B *Setup*


Setting up the TV

1

Press **SOURCE** (**DISC** on the remote) to select disc source.

2

Turn on the TV and set it to the correct Video In channel.

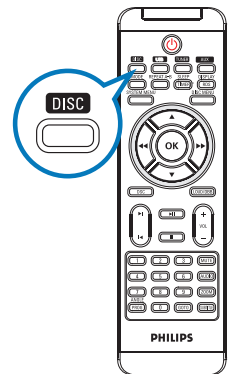

Step B Setup

Setting the clock

Important!

– To set clock in the Eco Power mode, press and hold **ECO POWER/STANDBY-ON** on the set for 3 seconds or more to switch to normal standby mode first before proceeding with the procedures below.

1

In standby mode, press and hold **CLOCK** on the system.

2


When the hour digits flash, turn the **VOL** control on the front panel or press **VOL +/-** on the remote to set the hours.

3

Press **CLOCK** again and the minute digits flash. Then turn the **VOL** control on the front panel or press **VOL +/-** on the remote to set the minutes.

4

Press **CLOCK** again to confirm the time setting.

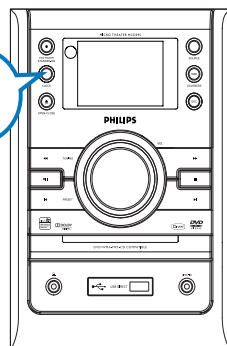


Before using the remote control

1 Pull out the plastic protective sheet.







2 Select the source you wish to control by pressing one of the source select keys on the remote control (for example **CD, TUNER**).

3 Then select the desired function (for example **▶ ||**, **◀◀**, **▶▶**)

 

Remove the plastic protective sheet

 Setting system menu options

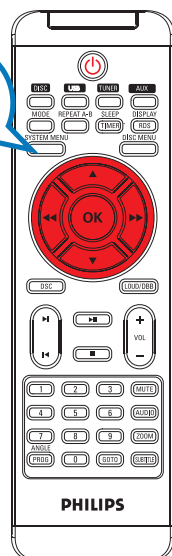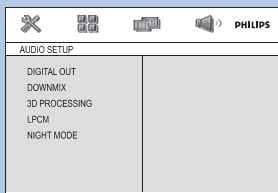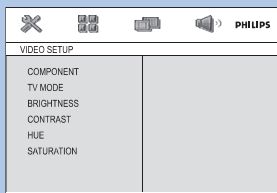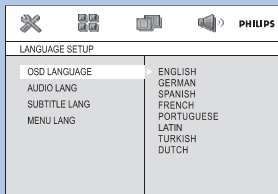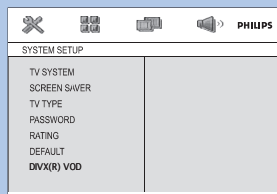


Tip

See chapters "Preparations" and "System Menu Options" in the User Manual for detailed descriptions.



Playing a disc

- Press **OPEN•CLOSE**  to open the disc tray and load in a disc, then press the same button again to close the disc tray.
- Make sure the label side of the disc is facing up.



- 2 Playback will start automatically. If not press ►.

- 3 To stop playback, press ■.

Programming and tuning to radio stations

- Press **SOURCE** (**TUNER** on the remote) to select tuner source.

- 2 Press **PROG/ANGLE** for more than two seconds to program all available stations in order of waveband.


- 3 Press **PRESET**   until the desired preset station is displayed.

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

 
Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

- Insert the USB device's USB plug into the socket  on the front panel of the main set.

- 2 Press **SOURCE** (or **USB** on the remote control) once or more to select **USB**.

- 3 Play the USB's audio files as you do with the albums/tracks on a CD.



© Royal Philips Electronics N.V. 2008
All rights reserved.

<http://www.philips.com>

PDCC-J.W.Wang 0808